



INSTRUCTIONS

HOW TO MODIFY YOUR DROOP SCREW INSERTS

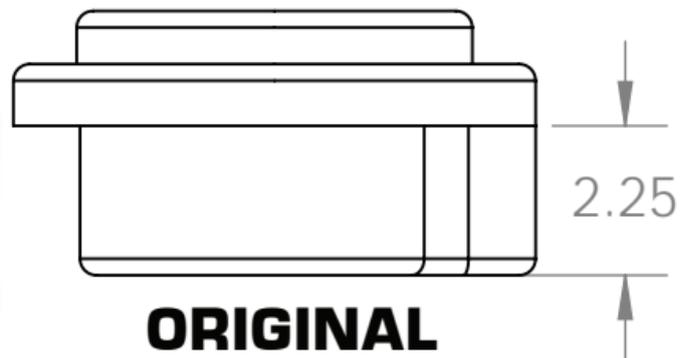

ORIGINAL

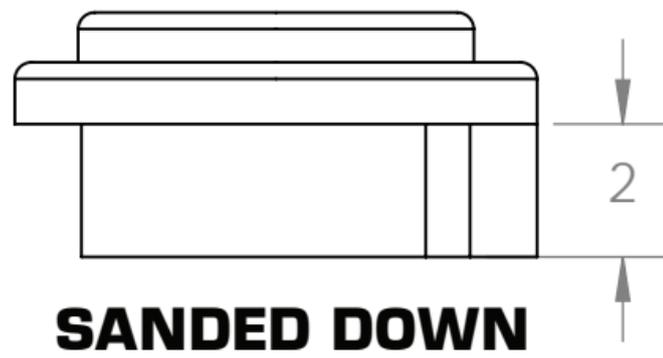

SANDED DOWN

CAREFULLY SAND DOWN THE DROOP SCREW INSERTS SO THEY DON'T EXTEND PAST THE CHASSIS. IT IS RECOMMENDED TO SUPER GLUE THEM INTO THE CHASSIS TO MAINTAIN POSITION.